

## RJ45 field plug pro


AWG 26/1 - 22/1, AWG 27/7 - 22/7

130E405032-E 10G C6A

130G405032-E 25G

130H405032-E 40G

- de Montagehinweis für den Installateur
- en Mounting note for the installer
- fr Instructions d'installation pour l'installateur

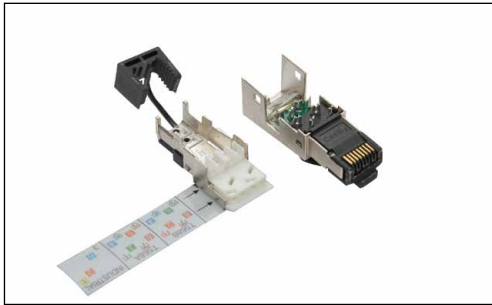

**i HINWEIS / NOTE / AVIS**

**Anschlussfehler vermeiden!**

Vor dem Anschluss Montageanleitung sorgfältig lesen!

**Avoid connection errors!**

Read installation instructions carefully before connecting!

**Éviter des erreurs de raccordement !**

A lire attentivement avant de procéder au raccordement !

de



en







fr









**Anschlussbelegung / PIN assignments  
Affectation des fils aux contacts**

PIN Nr. / No. contact no.	T568A	T568B	Industrial Profinet
1	WH-GN	WH-OG	YE
2	GN	OG	OG
3	WH-OG	WH-GN	WH
4	BU	BU	-
5	WH-BU	WH-BU	-
6	OG	GN	BU
7	WH-BN	WH-BN	-
8	BN	BN	-

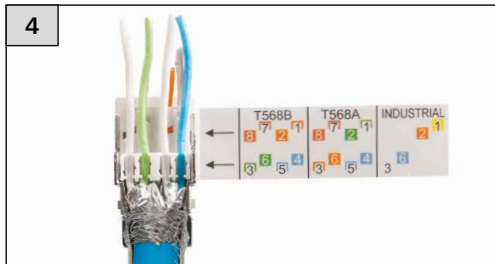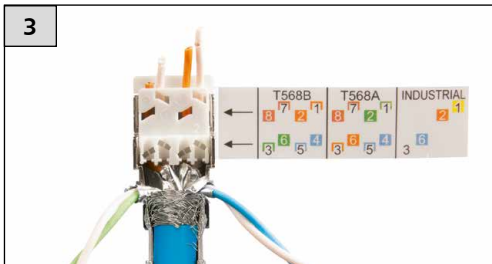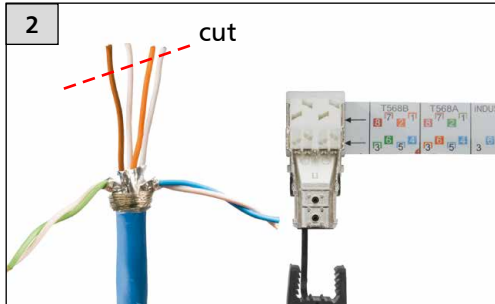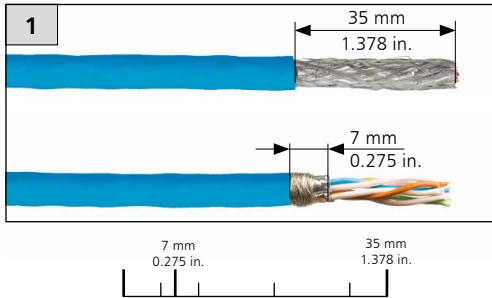

**RJ45 field plug pro** | AWG 26/1 - 22/1, AWG 27/7 - 22/7  
 130E405032-E | 130G405032-E | 130H405032-E

(de) Montagehinweis für den Installateur (en) Mounting note for the installer (fr) Instructions d'installation pour l'installateur

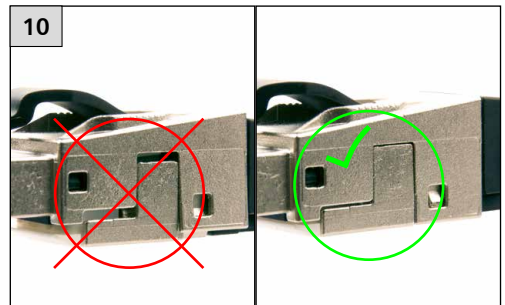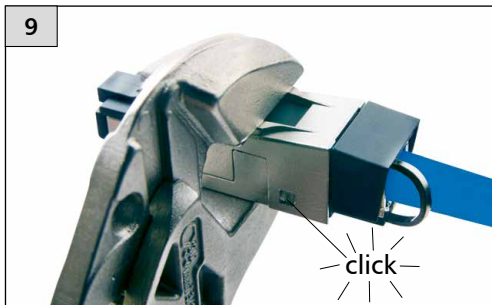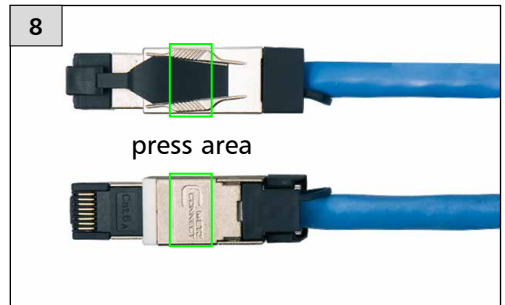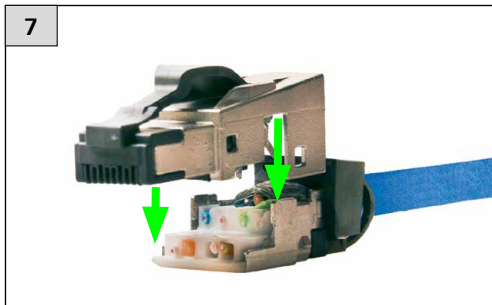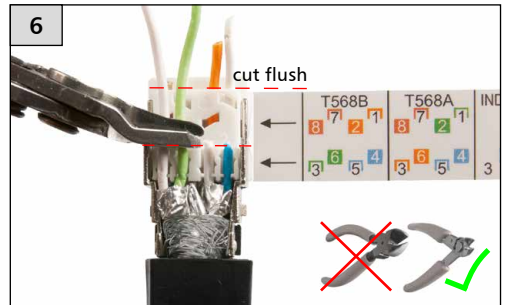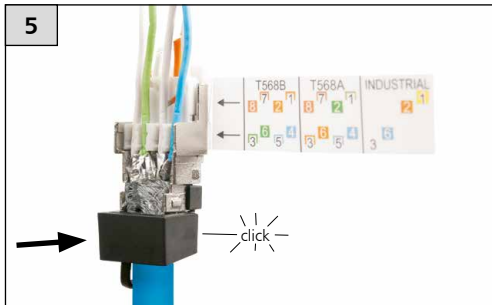

**Demontage / Disassembly / Démontage**

